



SD CARD ERROR

1. Use a microSD card reader and SD Formatter to clear the SD card (the default quick format will work fine)




2. Open Sentinel, go to (**Homepatrol**) / (**Scanner**)>**Clear User Data**, check “**show all drives**”, select the disk drive of the SD card and hit **OK**

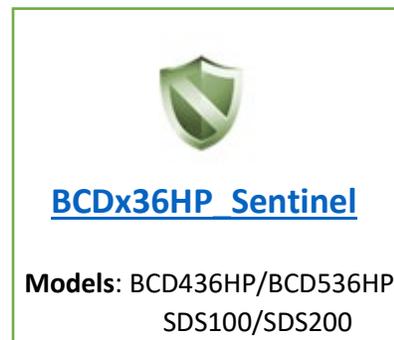


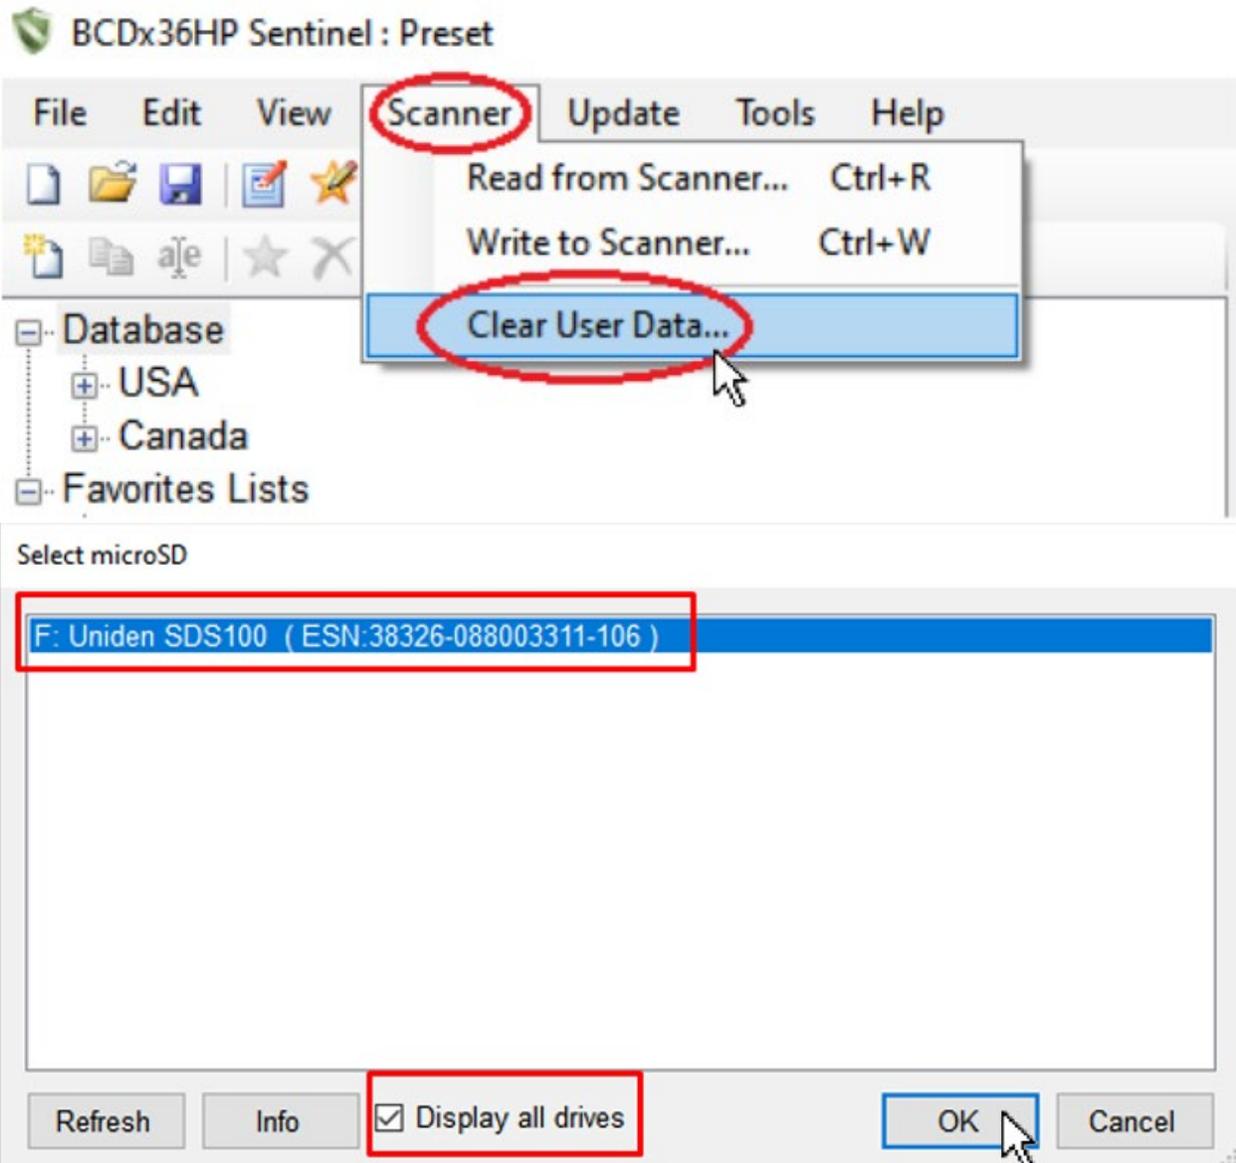

3. Go to **Update>Update Firmware**, select your version of Home Patrol and hit OK

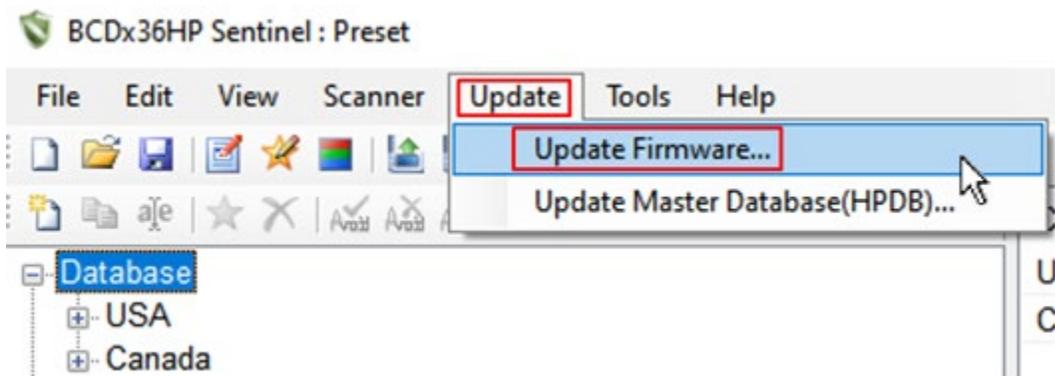

4. If you have a list already made in Sentinel, make sure the favorites list you want to monitor is set to **Download>On** and **Monitor>On**

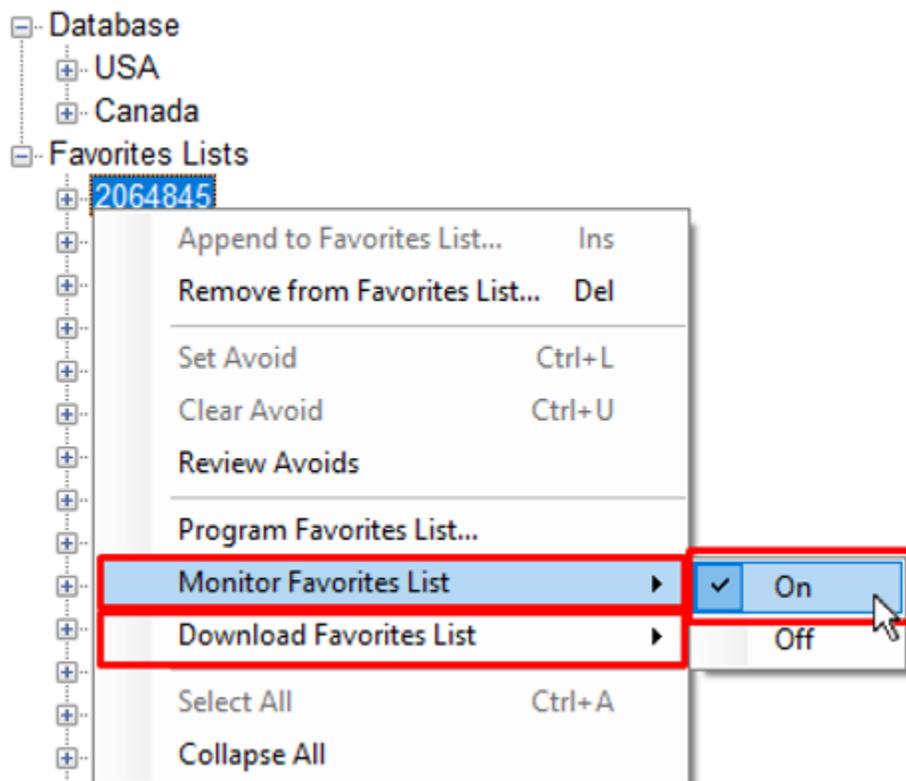

5. Go to (Home Patrol) / (Scanner)>(Write To Home Patrol) / (Write to Scanner) and disconnect the USB cable when the download is finished

